


ASSEMBLY PROCEDURES

1. SLIDE CLAMP NUT (1) OVER CABLE, STRIP CABLE AS SHOWN IN ASSEMBLY (A), DO NOT CUT DIELECTRIC.
2. SLIDE ADAPTER (2) OVER CABLE UNTIL IT STOPS. SOLDER ADAPTOR (2) USING MINIMUM HEAT.
3. CUT DIELECTRIC TO THE DIMENSION SHOWN IN (B), DO NOT NICK CENTER CONDUCTOR.
4. SLIDE BUSHING (3) OVER CENTER CONDUCTOR, SOLDER CONTACT (4) TO CENTER CONDUCTOR, CLEAN EXCESS SOLDER, SLIDE ASSEMBLY INTO BODY OF CONNECTOR AND TIGHTEN NUT (1).

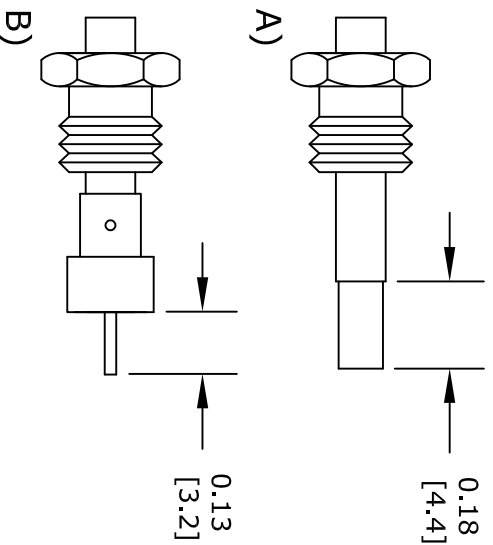

STRIPPING DIMENSIONS

FAIRVIEW MICROWAVE INC.

ALLEN, TX 75013 WWW.FAIRVIEWMICROWAVE.COM

TITLE

NOTES:
 1. UNLESS OTHERWISE SPECIFIED ALL DIMENSIONS ARE NOMINAL.
 2. ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE AT ANY TIME.
 3. DIMENSIONS ARE IN INCHES [mm].

DWG NO

SC8805

CAGE CODE

3FKR5

CAD FILE

082114

SHEET

SCALE N/A

SIZE A

2233